

Phaser® 6140
Color Laser Printer

'Click' to download complete Manual



Phaser® 6140 Service Manual

service-repairmanual.com

Phaser® 6140 Printer Service Manual

Warning

The following servicing instructions are for use by qualified service personnel only. To avoid personal injury, do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.

Prepared By:

Xerox Corporation
GPDG Worldwide Product Training and Information
26600 SW Parkway
Wilsonville, OR 97070

© 2009 by Xerox Corporation. All rights reserved.

Unpublished rights reserved under the copyright laws of the United States. Contents of this publication may not be reproduced in any form without permission of Xerox Corporation.

Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted, including without limitation, material generated from the software programs which are displayed on the screen such as styles, templates, icons, screen displays, looks, etc.

Xerox technical training materials and service manuals are intended for use by authorized Xerox service technicians and service partners only and are not for resale. These materials may not be distributed, copied, or otherwise reproduced without prior written consent from Xerox Corporation.

XEROX®, CentreWare®, Phaser®, PrintingScout™, and Walk-Up® are trademarks of Xerox Corporation in the United States and/or other countries.

Adobe Reader®, Adobe Type Manager®, ATM™, and PostScript® are trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apple®, AppleTalk®, Bonjour®, EtherTalk®, LaserWriter®, LocalTalk®, Macintosh®, Mac OS®, and TrueType® are trademarks of Apple Computer, Inc. in the United States and/or other countries.

HP-GL®, HP-UX®, and PCL® are trademarks of Hewlett-Packard Corporation in the United States and/or other countries.

Windows®, Vista™, and Windows Server™ are trademarks of Microsoft Corporation in the United States and/or other countries.

Novell®, NetWare®, NDPS®, NDS®, Novell Directory Services®, IPX™, and Novell Distributed Print Services™ are trademarks of Novell, Incorporated in the United States and/or other countries.

SunSM, Sun Microsystems™, and Solaris™ are trademarks of Sun Microsystems, Incorporated in the United States and/or other countries.

SWOP® is a trademark of SWOP, Inc.

UNIX® is a registered trademark in the US and other countries, licensed exclusively through X/Open Company Limited.

As an ENERGY STAR® partner, Xerox Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency. The ENERGY STAR name and logo are registered U.S. marks.



PANTONE® Colors generated may not match PANTONE-identified standards. Consult current PANTONE Publications for accurate color. PANTONE® and other Pantone, Inc. trademarks are the property of Pantone, Inc. © Pantone, Inc., 2000.

Contents

About this Service Manual	xiii
Manual Organization	xiv
Symbols Marked on the Product	xv
Power Safety Precautions	xvi
Electrostatic Discharge (ESD) Precautions	xvii
Service Safety Summary	xviii
Regulatory	xx

1 General Information

Printer Introduction and Overview	1-2
Technical Support Information	1-2
Printer Configuration	1-3
Parts of the Printer	1-4
Front and Side Views	1-4
Rear View	1-5
Internal View	1-6
Control Panel	1-7
Printer Options	1-8
Additional Memory	1-8
Optional Feeder	1-9
Duplex Unit	1-9
Maintenance Items	1-10
Consumables	1-11
Specifications	1-12
Printer Specifications	1-12
Memory Specifications	1-13
Electrical Specifications	1-13
Print Speed	1-13
Environmental Specifications	1-14
Operating Mode	1-14
First Print Output Time	1-15
Physical Dimensions and Clearances	1-16
Mounting Surface Specifications	1-17
Media and Tray Specifications	1-18

2 Theory of Operation

Phaser 6140 Operational Overview	2-2
Print Process	2-2
Charging	2-4
Exposure	2-5
Development	2-7
Toner Dispense Path	2-8
Image Transfer	2-9
Imaging Unit	2-11
Excess Toner Collection	2-12
Fusing	2-13
Transfer Belt Cleaning	2-13
Media Path	2-14
Media Path Drive	2-14
Media Path Components	2-15
Sensors	2-16
Sensor Types	2-16
Sensors in the Media Path	2-17
Major Assemblies and Functions	2-18
Tray	2-18
Feeder	2-20
Optional Feeder	2-22
Duplex Unit	2-23
Manual Feed & Registration	2-25
Transfer Belt and Fuser	2-29
Laser Unit	2-30
Toner Cartridge & Dispenser	2-32
Imaging Unit	2-33
Drive	2-34
Electrical	2-36
Printer Modes	2-40
Printer Control	2-40
Media Size Detection	2-40
Laser Control	2-40
Process Control	2-40
Color Registration Control	2-42
Fuser Control	2-43
Drive	2-44
Main Drive Assembly	2-44
Sub Drive Assembly	2-45
Feed Drive Assembly	2-46
Development and Toner Collection	2-50
Dispense Assembly	2-52
Duplex Unit	2-53
Optional Feeder	2-55

3 Error Messages and Codes

Introduction	3-2
Accessing Error History Report	3-2
Error History Report	3-2
Servicing Instructions	3-4
Messages, Codes, and Procedures	3-5
Error Messages Abbreviations	3-5
Error Message and Code Summary	3-6
Fuser Errors	3-12
Insert Fuser 010-317	3-12
Replace Fuser 010-351	3-13
Fuser Error 010-397	3-14
System Errors	3-16
Firmware Errors	3-16
Out of Memory 016-718	3-17
PDL Error 016-720	3-18
Format Error 016-737	3-19
Invalid User 016-757	3-20
Disabled Func 016-758	3-21
Limit Exceeded 016-759	3-22
Invalid Job 016-799	3-23
Disk Full 016-982	3-24
MCU Firmware 024-340	3-25
Download Mode 024-360	3-26
PAGEC Timer 024-362	3-27
MCU Comm Error 024-371	3-28
MCU NVRAM 041-340	3-29
Electrical Errors	3-31
Fan Motor 042-313	3-31
Motor Error 042-325	3-32
Motor Error 042-326	3-33
K Mode Sol Error 042-372, 042-373	3-35
Over Heat 042-700	3-36
Laser Error 061-370	3-37
250 Feeder Error 072-215	3-38
Motor Error 072-216	3-39
Duplexer Error 077-215	3-41
IU CRUM Error 091-916	3-43
CTD Sensor Error 092-310	3-44
Env Sensor Error 092-661	3-46
Trans Life Over 094-351	3-47
IP Board Errors 116-3xx	3-48
RAM Error 116-316, 116-320	3-49
Collate Full 116-721	3-50
Tray and Media Errors	3-51
Load Tray 1, 2 or Manual Feed Slot	3-51
Load Tray 1	3-52
Load Tray 2	3-53
Load or Reseat Paper Manual Feed	3-55
Insert Output to Tray 1	3-56
Insert Output to Tray 2	3-57

Jam Errors	3-59
Jam at Tray 1	3-59
Jam at Tray 2	3-62
Jam at Tray 2	3-66
Jam at Front Cover	3-69
Chk Manual Feed	3-71
Remove Paper from Manual Feed	3-72
Jam at Front Cover	3-75
Jam at Exit	3-77
Jam at Duplexer	3-79
Jam at Exit	3-81
Jam at Registration Roller	3-83
Covers	3-86
Front Cover Open	3-86
Side Door Open	3-87
Consumable/Routine Maintenance Errors	3-88
Check or Replace Imaging Unit	3-88
Insert Imaging Unit	3-89
CMYK Low or Replace	3-90
Low Density Yellow Cartridge	3-90
Low Density Magenta Cartridge	3-92
Low Density Cyan Cartridge Error	3-93
Low Density Black Cartridge Error	3-95
Waste Full CMYK Cartridge	3-96
Invalid CMYK	3-97
Insert CMYK Cartridge	3-99
Non-Xerox Toner	3-100
Check Unit CTD Sensor	3-101
Over Heat	3-103

4 General Troubleshooting

Introduction	4-2
Initial Actions	4-2
Display Problems	4-2
Printing Problems	4-2
Media-Based Problems	4-3
System Startup	4-5
Power On Self Test (POST)	4-6
Service Diagnostics	4-7
Using Service Diagnostics	4-7
Entering Service Diagnostics Mode	4-7
Exiting Service Diagnostics Mode	4-7
Service Diagnostics Menu Maps	4-8
Diagnostic Test Descriptions	4-10

Print Engine Test Procedures	4-16
Manual Feed Sensor	4-16
Tray 1 No Paper Sensor	4-17
Registration Sensor	4-18
Exit Sensor	4-19
K Mode Sensor	4-20
Drum Erase Lamp (K)	4-21
Drum Erase Lamp (C, M, Y)	4-22
Right Side Door Switch	4-23
Interlock Switch	4-24
K Mode Solenoid	4-25
Main Drive Assembly	4-26
Sub Drive Assembly	4-27
Toner Motors	4-28
Fan	4-29
Registration Clutch	4-30
Tray 1 Feed Solenoid	4-31
Duplex Unit Test Procedures	4-32
Duplex Exit Motor	4-32
Duplex Clutch	4-34
Duplex Motor	4-35
Optional Feeder Test Procedures	4-36
Tray 2 No Paper Sensor	4-36
Tray 2 Paper Path Sensor	4-37
Tray 2 Feeder Motor Test	4-38
Tray 2 Feed Solenoid Test	4-39
Tray 2 Drive Clutch	4-40
Engine Test Print	4-41
Control Panel Troubleshooting	4-44
Printer Does Not Come to a "Ready" State	4-44
Ready LED is On, Display is Blank	4-44
Control Panel has Failed	4-44
Inoperable Printer Troubleshooting	4-45
AC Power Supply Troubleshooting	4-45
DC Power Supply Troubleshooting	4-46
+24 VDC Interlock Switch	4-48
Image Processor Board	4-49
Printer Continually Displays Warming Up	4-50
Abnormal Noises	4-51
Abnormal Noise When Power is Turned On	4-51
Abnormal Noise During Standby	4-52
Abnormal Noise During Printing	4-53
Electrical Noise	4-56
Operating System and Application Problems	4-57
Windows 2000, Windows XP, Windows Server Troubleshooting	4-57
Verify Settings	4-57
Verify Driver Installation	4-57
Macintosh Troubleshooting	4-58

5 Print-Quality Troubleshooting

Print-Quality Problems Overview	5-2
Defects Associated with Specific Printer Components	5-2
Checklist Before Troubleshooting Print-Quality	5-4
Check Printer Condition	5-4
Symptom Checklist	5-4
Print-Quality Troubleshooting	5-7
Print-Quality Defect Definitions	5-7
Light or Undertone Print	5-8
Blank Print	5-10
Black Print	5-13
Vertical Blank Lines	5-15
Horizontal Band, Voids, or Streaks	5-17
Vertical Stripes	5-19
Horizontal Stripes	5-21
Partial Band	5-23
Random Spots	5-25
Repeating Bands, Lines, Marks, or Spots	5-27
Residual Image or Ghosting	5-28
Background Contamination	5-30
Skew	5-32
Damaged Media	5-34
Unfused Image	5-36
Color Registration	5-37
Test Prints	5-39
No Image IOT Test Print	5-39
Pattern IOT Test Print	5-40
Grid 2 ESS Test Print	5-40
Cyan 20 % ESS Test Print	5-41
Magenta 20 % ESS Test Print	5-41
Yellow 20 % ESS Test Print	5-42
Black 20 % ESS Test Print	5-42
CMY 20 % ESS Test Print	5-43
Gradation ESS Test Print	5-43
Toner Pallet Check Test Print	5-44
Contamination Check Test Prints	5-45
Pitch Chart Test Print	5-46
Image Specifications	5-47
Skew	5-48
Parallelism	5-49
Linearity	5-49
Perpendicularity	5-50
Magnification Error	5-50
Registration	5-51
Guaranteed Print Areas	5-52

6 Adjustments and Calibrations

Adjustments	6-2
Color Registration	6-2
Enabling/Disabling Automatic Color Registration	6-2
Printing the Color Registration Correction Chart	6-3
Adjusting Color Registration	6-3
Resetting the Fuser	6-5
Calibrations	6-6
Initializing Print Meter	6-6
Initializing NVM (NVRAM)	6-6
Parameter Setting	6-7

7 Cleaning and Maintenance

Service Maintenance Procedure	7-2
Recommended Tools	7-2
Cleaning	7-2
Cleaning the Laser Lens	7-3
Maintenance	7-4
Moving the Printer	7-5

8 Service Parts Disassembly

Overview	8-2
Standard Orientation of the Printer	8-2
Preparation	8-3
Notations in the Disassembly Text	8-4
Fastener Types	8-5
Maintenance Items and Consumables	8-6
Separator Roller	8-6
Imaging Unit	8-7
Feed Roller	8-9
Fuser	8-10
Toner Cartridges	8-12
Covers	8-14
Top Cover	8-14
Output Tray Extension	8-15
Rear Cover	8-16
Rear Tray Cover	8-17
Right Side Cover	8-18
Right Side Door	8-19
Left Side Cover	8-20
Front Cover	8-22
Lower Link Pivot Shaft Kit	8-25
Front Cover Pivot Shaft Kit	8-25
Link Covers	8-26
Link Springs	8-27
Right Front Holder	8-28
Left Front Holder	8-30
Upper Link Pivot Shaft Kit	8-32
Cassette Stopper	8-33

Feeder	8-34
Drive Clutch and Bearing Kit.	8-34
Feed Solenoid	8-36
Upper Frame Assembly	8-38
Feeder Assembly	8-45
Registration Roller	8-46
Registration Sensor Actuator	8-48
Manual Feed No Paper Sensor	8-49
Tray 1 No Paper Sensor	8-50
Registration Sensor	8-50
Manual Feed Sensor Actuator	8-52
Tray No Paper Sensor Actuator	8-53
Xerographics	8-54
Laser Unit	8-54
Right Imaging Unit Restraint Block	8-60
Left Imaging Unit Restraint Block	8-61
Erase LED Assembly	8-63
Dispense Assembly	8-64
Toner Motor Frame Assembly	8-70
Toner Cartridge Holders	8-74
Transfer Belt Pivot Kit	8-76
Transfer Belt	8-79
Drive	8-80
Sub-Drive Assembly	8-80
Main Drive Assembly	8-81
Gear P2	8-83
Feed Drive Assembly	8-84
Electrical	8-86
Fan	8-86
Image Processor Board	8-87
LVPS	8-91
Interlock Harness	8-92
Control Panel	8-93
Control Panel Harness A	8-94
Humidity Sensor	8-95
Power Switch Harness	8-96
GFI Breaker	8-99
Right Side Door Switch	8-100
HVPS	8-101
HVPS Frame	8-102
MCU Board	8-103
EEPROM Board	8-104
Fan Board	8-105
IP Board Cage	8-106
Duplex Unit	8-107
Duplex Harness	8-108
Duplex Board	8-109

Optional Feeder	8-111
Left Side Cover	8-112
Chute Cover	8-112
Rear Cover	8-113
Front Cover	8-113
Right Side Cover	8-114
Feeder Board	8-115
Option Drive Clutch and Bearing	8-116
Feed Gear Assembly	8-117
Feed Solenoid Kit	8-118
Feed Motor Kit	8-119
Feed Gear Kit	8-120
Optional Feeder Harness	8-121
Registration Roller Bearing	8-122
Feed Roller	8-123
Registration Roller	8-124
Registration In Actuator	8-126
No Paper Sensor	8-127
Paper Path Sensor	8-128
No Paper Sensor Actuator	8-130
Separator Holder	8-132

9 Parts List

Serial Number Format	9-2
Using the Parts List	9-3
Parts Lists	9-4
Parts List 1.1 Covers (1/2)	9-4
Parts List 1.2 Covers (2/2)	9-6
Parts List 2.1 Tray 1	9-8
Parts List 3.1 Feeder (1/2)	9-10
Parts List 3.2 Feeder (2/2)	9-12
Parts List 4.1 Xerographics	9-14
Parts List 5.1 Toner Dispense	9-16
Parts List 6.1 Transfer & Fuser	9-18
Parts List 7.1 Drive	9-20
Parts List 8.1 Electrical (1/2)	9-22
Parts List 8.2 Electrical (2/2)	9-24
Parts List 9.1 Harnesses	9-26
Parts List 11.1 Duplex Unit	9-28
Parts List 11.2 Duplex Unit (2/2)	9-30
Parts List 12.1 Optional Feeder (1/5)	9-32
Parts List 12.2 Optional Feeder (2/5)	9-34
Parts List 12.3 Optional Feeder (3/5)	9-36
Parts List 12.4 Optional Feeder (4/5)	9-38
Parts List 12.5 Optional Feeder (5/5)	9-40
Xerox Supplies and Accessories	9-42
Service Kits	9-42

10 Wiring

System Connections	10-2
Plug/Jack Designations	10-3
Print Engine Plug/Jack Designators	10-3
Duplex Unit Plug/Jack Designators	10-5
Optional Feeder Plug/Jack Designators	10-6
Plug/Jack Locator Diagrams	10-7
Map 1 - Print Engine	10-7
Map 2 - Laser Unit and Feeder	10-8
Map 3 - LVPS and Drive	10-9
Map 4 - MCU Board	10-10
Map 5 - Duplex Unit	10-11
Map 6 - Optional Feeder	10-12
Wiring Diagrams	10-13
Notations Used in the Wiring Diagrams	10-13
Wiring Diagram Descriptions	10-16
LVPS	10-17
Media Feed	10-18
Main Drive	10-19
Laser Unit	10-20
Xerographics	10-21
HVPS	10-22
Toner Dispense	10-23
Fuser	10-24
System Control	10-25
Option Feeder	10-26
Duplex Unit	10-27

Reference

Phaser 6140 Menu Map	A-2
Media Guidelines	A-3
Paper Characteristics	A-3
Recommended Paper	A-4
Unacceptable Paper	A-4
Firmware Update	A-5
Boot Firmware Update	A-5
Main Firmware Update	A-6
Acronyms and Abbreviations	A-7

Index